INON Strobe Light Holder･LE (shipped before September 10, 2012) User Manual Appendix

Thank you for purchasing INON product.

This document explains installation method of compatible strobe/LED flashlight on this product shipped before September 10th, 2012 in combination with the Z Adapter II.
Please take below contents as “installation method” instead of the same section of the original user manual.
The Strobe Light Holder shipped before January 19th, 2012 does not come with「Allen Wrench(AF:5mm)」(or「M6 Hex Wrench」) which is necessary to install the Z Adapter II. Please prepare the wrench separately.
Other INON products like Grip Base D4/Grip BaseM1 or Z Joint, Direct Base III, comes with the wrench as standard accessory

Attaching LED flashlight

Firstly separate “Light Head” and “Battery Box” of your LE series LED flashlight and remove total three O-rings; two yellow O-rings and one black (LE250/LE550-S/LE550-W/LE700-S/LE700-W) or orange (LE240) O-ring from the “Battery Box”. Separate the「Strobe Light Holder Body」and 2 x「S Light Holder Plates」. Widen the mouth of the「S Light Holder Plate」to attach it on the “Battery Box” then re-install removed three O-rings on the “Battery Box” and attach the “Light Head” on “Battery Box”. When removing/attaching “Light Head”/“Battery Box” O-rings, make sure to refer to your LED flashlight user manual to ensure proper and appropriate procedure. Put INON grease in『screw holes』on the「Strobe Light Holder Body」and joint the「Strobe Light Holder Body」and the「S Light Holder Plates」together with supplied screws. You can attach either 1 or 2 compatible LED flashlight(s).

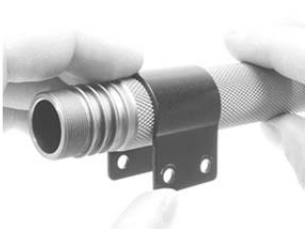

Z Adapter II Preparation

When using Z Adapter II, remove pre-installed「Washer(white)」from「M6 thumbscrew」and replace the screw with supplied「Strobe Light Holder Cap Screw」then attach it and the「Washer(white)」on the Z Adapter II.
Make sure that「Z Adapter II」already has 3 sets of「M2 Cap Bolt」/「M2 Spring Washer」.
Without using the「Washer(white)」and 3 sets of「M2 Cap Bolt」/「M2 Spring Washer」could damage a combined strobe.

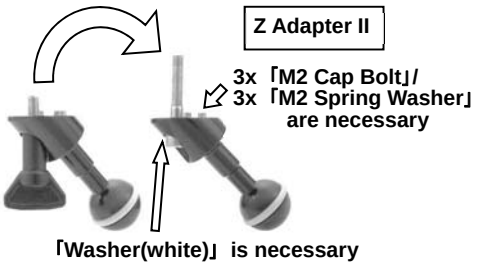

Z Adapter II Installation

Set the Z Adapter II with replaced screw on the「Strobe Light Holder Body」so that the O-ring on the「Strobe Light Holder Body」contacts with the Z Adapter II. Fix on combined strobe with the Allen Wrench (AF:5mm) using long side of the wrench not to apply excessive torque. Applying excessive torque like using short side of the wrench may damage on the combined strobe.

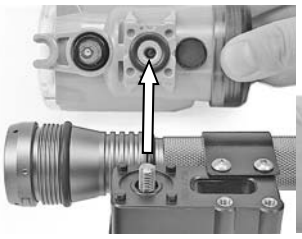

When you attach LED flashlight only, use supplied「Strobe Light Holder M6 Screw」to fasten the Z Adapter II as shown in image right.
Make sure that the protruded part of the「Strobe Light Holder Body」seats in groove of the「Strobe Light Holder M6 Screw」.

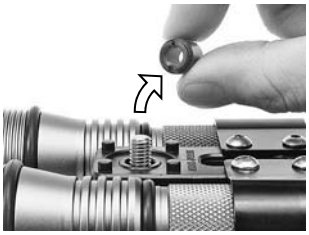

Installing on compatible Arm

Refer to respective user manual to attach on compatible “「YS Adapter」compatible arm” or “Arm II System”/”Float Arm System”.

INON Inc http://www.inon.jp/ September 2012

All right reserved. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopy, recording on any information storage and retrieval system now known or to be invented, without permission in writing from INON Inc.